

CORBY

KETTLE

This manual is for the following models:Buckingham
KTL0003Lancaster
KTL0004Kensington
LWK-139S0.6L Canterbury
KTL00071L Canterbury
KTL0008**www.corbyofwindsor.com**www.firedupcorporation.com/manual

These instructions must be read before use

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage.

These instructions are also available on our website.

CONTENTS

SECTION 01

Important	03
Cautions	04-05
Introduction	06

SECTION 02

Identification	07
Before use	07

SECTION 03

Use	08
Care	08-09
Specification	10
Contacts	12

IMPORTANT!

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children aged less than 8 years.

Children shall not play with the appliance.

Do not attempt to make repairs to the appliance. If the supply cord becomes damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid any hazards.

When cleaning, or storing away, always pull out the plug from the socket outlet. Never yank the cord to disconnect from the outlet, instead grasp the plug and pull to disconnect. Always allow the appliance to cool completely before storing away.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

CAUTIONS

DO'S

-
- Check the appliance and the supply cord for damage regularly.
-
- Check your mains supply is the same as that indicated on the product before connecting.
-
- Ensure that the appliance is used on a firm, flat surface.
-
- Always close the lid securely, otherwise the kettle may not switch off automatically and may eject boiling water.
-
- Ensure the kettle is switched off before removing it from the power base.
-
- Always remove the kettle from the power base before filling or pouring.
-
- Take care when carrying the kettle before and after boiling water.
-
- Always pour slowly and do not over tilt the kettle to avoid splashing.
-
- Only use the kettle with the base provided.
-

DON'TS

- Never leave the appliance unattended whilst in use.
 - The appliance must never be immersed in water or any other liquid.
 - Never under fill the kettle and never use without water.
 - Never overfill the kettle as boiling water may be ejected.
-

• **WARNING** - Never open the lid while the water is heating.

- Never move the kettle whilst it is in use.
- Never allow the supply cord to touch hot surfaces.
- Never use the appliance if the supply cord or plug is damaged or if the appliance has been damaged in any manner.
- Never use this kettle with any power base other than the one provided.
- Do not touch hot surfaces i.e. body or lid. Use handles or knobs.
- Do not use the kettle for any other purpose than for heating water.
- Never use the appliance in a bathroom or near any source of water.
- Never use the appliance outdoors.
- Do not over-extend the lid.

INTRODUCTION

 
Thank you for choosing this appliance. The appliance is designed to meet the most stringent quality, performance, and safety requirements. This guide aims to improve your understanding and appreciation of your new appliance by providing simple and informative use and care instructions.

This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments and by clients in hotels, motels and other residential type environments.


IDENTIFICATION

NOTE: This manual covers multiple products, images are for illustrative purposes only.


Buckingham / Lancaster **KTL0003 / KTL0004**

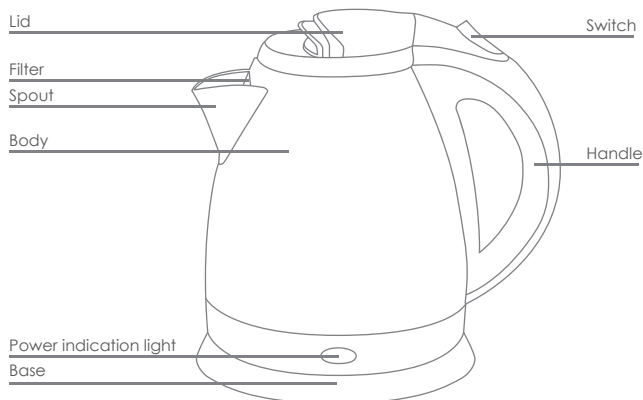

**Kensington
LWK-139S**

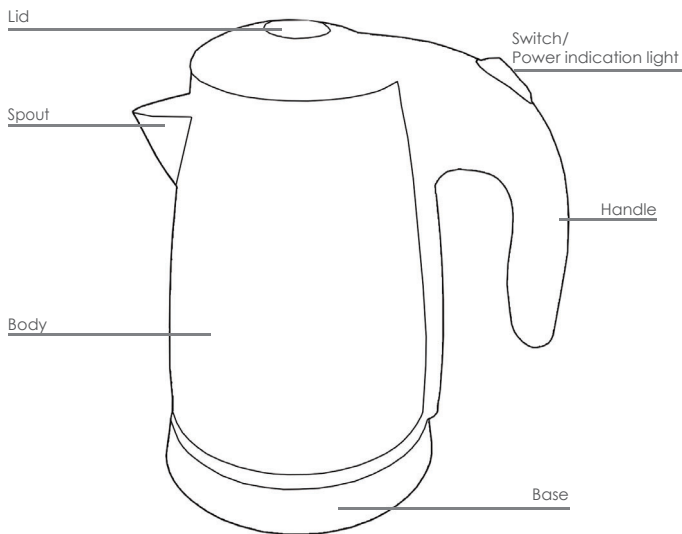 

 0.6L Canterbury / 1L Canterbury
KTL0007 / KTL0008

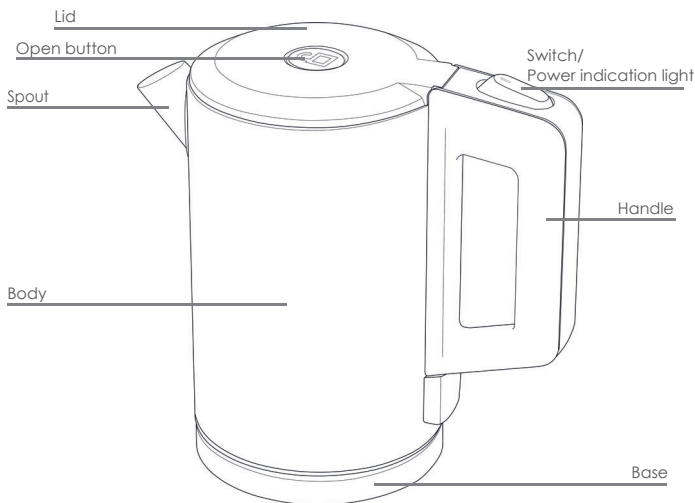

BEFORE USE

1. Remove ALL packaging.
2. Ensure the supply voltage is the same as that indicated on the product.
3. Fill the kettle with water to the MAX capacity and allow to boil. Discard the water afterwards and rinse with cold water.

USE

POSITIONING

1. Keep the kettle, the power base, and the supply cord away from hotplates, hobs or burners.
2. Place the kettle and its base towards the back of the working surface.
3. Do not allow the mains lead to hang over the edge of the table or work surface, or anywhere it may be accidentally caught or tripped over.

FILLING

1. Remove the kettle from the power base and fill with water between the MIN & MAX markings.

IMPORTANT: Do not over-extend the lid.

2. DO NOT OVERFILL OR UNDER-FILL THE KETTLE. If the kettle is overfilled, boiling water may be ejected. If under-filled, the kettle may run dry while operating.
3. Place the kettle on the base and ensure the lid is firmly closed.

OPERATING THE KETTLE

1. Making sure the kettle switch is in the 'off' position, plug the power base into the wall socket.
2. After filling the kettle and carefully positioning it on the base (without spilling), press the kettle switch up. A light should come on to indicate the kettle is ON.
3. When the kettle has completed boiling the water the kettle switch will return to its original position and the light should go out (indicating the kettle is OFF).
4. To stop the kettle early during use, simply push the kettle switch back into its original position.

SAFETY DEVICES

1. The kettle is fitted with an ON/OFF switch which automatically switches off once the water has boiled. Do not hold the ON/OFF switch in the ON position.
2. If the kettle is switched ON with too little water, or no water, it is protected against damage by a safety cut-out which will switch off the power. If the cut-out operates, disconnect the kettle from the mains supply and leave to cool down before refilling with cold water.

CARE

Misuse such as overfilling the kettle, allowing excessive scale build-up, and boiling with water below the MIN mark will reduce the life of the element and product.

CLEANING

1. Turn off and unplug the kettle and power base.
2. To clean make sure the kettle is empty and, before continuing, ensure the kettle has completely cooled.
3. Using a soft, damp cloth and detergent (if necessary) wipe down the kettle.
4. Make sure all connectors, sockets and switches are kept dry.
5. DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER OR ANY OTHER LIQUID.
6. Do not use harsh or abrasive cleaners as these can damage the product surfaces.

SCALE & DE-SCALING

1. To minimize scale build-up, empty the kettle after every use and do not leave unused water in the kettle over long periods of time.
2. Regularly de-scale the kettle using a proprietary brand of de-scaler. Follow the de-scaler instructions thoroughly.
3. After de-scaling, clean the kettle and boil with MAX capacity (empty the boiled water and rinse with cold water).

THE FILTER

1. The filter is designed to stop scale particles entering drinks after water has been boiled in the kettle. It is paramount that the filter is kept clean.
2. Clean the filter whenever there are noticeable deposits left on it.
3. When cleaning the filter, do not touch the filter mesh and ensure your hands are clean and free of soap or chemicals.
4. Rinse the kettle out to remove any other scale particles.

5. **WARNING:** Do not use the kettle without the filter as pouring may become dangerous.

 
PLUG REPLACEMENT (for product fitted with BS plug)

This appliance is supplied with a BS1363 3-pin plug fitted with a 13 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at **13 Amp** and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:

The wires in the supply cord on this appliance are coloured in accordance with the following code:

- Green and Yellow - Earth
Blue - Neutral
Brown - Live

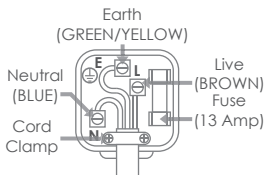

THIS APPLIANCE MUST BE EARTHED

As the colours may not correspond with the markings identifying the terminals in your plug proceed as follows.

- The green and yellow earth wire must be connected to the terminal in the plug which is marked with the letter E or with the earth symbol (⊕)
- The blue wire must be connected to the terminal marked N
- The brown wire must be connected to the terminal marked L

IMPORTANT - any cut off plug should be disposed of safely to prevent hazard. There is a danger of electric shock if a cut off plug is inserted into a socket outlet.

SPECIFICATION

Model No:	Buckingham KTL0003	Lancaster KTL0004	Kensington LWK-139S	0.6L Canterbury KTL0007	1L Canterbury KTL0008
Voltage:	220-240V	220-240V	230V	220-240V	220-240V
Frequency:	50-60Hz	50-60Hz	50Hz	50-60Hz	50-60Hz
Power:	1250-1500W	1250-1500W	1000W	1000W	1500W
Max Capacity :	1L	1L	0.6L	0.6L	1L
Min Capacity:	0.6L	0.3L	0.3L	0.3L	0.3L
Thermal Efficiency:	92%	86%	86%	86%	92%

CONFORMITY WITH DIRECTIVES

Conforms with relevant European Directives

ENVIRONMENTAL PROTECTION

For electrical products sold within the European Community.

This appliance is labelled in accordance with European Directive 2002/96/EC concerning Waste Electrical and Electronic Equipment (WEEE). Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GUARANTEE

AFFIX RECEIPT OR PROOF
OF PURCHASE HERE

For your convenience, you are not required to complete a form and return it to us in order to validate your guarantee. However, please ensure that you retain your receipt which will act as both proof of purchase and a guarantee validation document. **We recommend that you attach your receipt to this documentation.**

Your product carries a minimum 12 month guarantee from the date that the original purchaser receives it. If your product fails to operate to its specification due to faulty workmanship or materials during the guarantee period, we will either repair or replace the product. We will use our discretion to determine whether to offer a repair or provide a replacement. The product will not be covered by the guarantee if it has been misused, transformed, modified or altered in any way.

If your product fails within the guarantee period please ensure that you have all necessary documentation available including proof of purchase (receipt or invoice with serial number, location and date of purchase) in addition to all original undamaged packaging and leaflets etc. It is strongly recommended that you inspect your product carefully before it is used or installed. For full details of your product you should refer to the instruction manual which accompanies the product. You are strongly advised to read this manual carefully in its entirety and to retain it for future reference.

This product guarantee does not affect your statutory rights.



www.firedupcorporation.com

Fired Up Corporation Ltd
Fired Up Buildings
HD1 3LF, UK

Fired Up Corporation
(Ireland) Ltd
71, D02 P593, Dublin